

# ***United States Air Force*** ***School of Aerospace Medicine***

---

***I n t e g r i t y - S e r v i c e - E x c e l l e n  
c e***

## **Bioenvironmental Engineering (BE) Role in Emergency Response**



**U.S. AIR FORCE**

---

**On-Scene Commanders Course**  
**Maxwell AFB, AL**  
**XX Xxx 06**

**Col Michael J. Rusden**  
**AFMOA/SGPB**  
**DSN 297-4314**



**U.S. AIR FORCE**

---

# Overview

- **Foundations**
- **BE Capabilities**
- **Response Equipment**
- **Recommendations**



**U.S. AIR FORCE**

---

# **Foundations**

---

***Integrity - Service - Excellence***



U.S. AIR FORCE

---

# BE Vision and Mission

## Vision

**Optimize combat and operational capabilities by preventing casualties and enhancing performance in the deployed and in garrison environments through full spectrum threat health risk reduction**

## Mission

**Provide operational health risk assessment expertise to enhance commander decision making and health service support capabilities**



U.S. AIR FORCE

# BE Strategic Objective

---

- **“Garrison = Deployed”**
  - **Common set of capabilities and skills for both garrison and deployed settings**
  - **Consistent application of skills and execution of capabilities across operational spectrum**
  
- **“Day-to-Day = Response”**
  - **Anticipate, Identify, Evaluate, and Control**
  - **Recommend courses of action to improve operations and minimize health impacts**



**U.S. AIR FORCE**

---

# **BE Capabilities**

---

***Integrity - Service - Excellence***



U.S. AIR FORCE

---

# BE Capabilities

- **Full Spectrum (Health) Threat Response (FSHTR)**
  - Mission planning (targeteering, weapons effects)
  - Attack (sectors, patient decon, mortuary affairs)
  - Mishap (aircraft, rolling stock, infrastructure)
  - Natural Disasters
  
- **Occupational and Environmental Health Site Assessment (OEHSA)**
  - Weapon systems
  - Infrastructure (workplace, community)



U.S. AIR FORCE

# BE Capabilities

- **Health Risk Assessment (HRA)**
  - **Identify potential/actual health hazards**
    - **Threat / Vulnerability assessments**
  - **Evaluate potential/actual health hazards**
    - **Identify / Quantify hazards**
  - **Control potential/actual health hazards**
    - **Recommend engineering controls**
    - **Recommend protective equipment**
    - **Recommend process change**





U.S. AIR FORCE

# BE Capabilities


- **Health Risk Management (aka Medical Operational Risk Management)**
  - **Provide recommendations (wrt missions)**
    - **Improve operations**
    - **Sustain operations**
    - **Restore operations**
- **Communicate Health Risks**
- **Train**
  - **Health risks**
  - **Protective postures**



U.S. AIR FORCE

# BE Capabilities

## ■ Capability Architecture

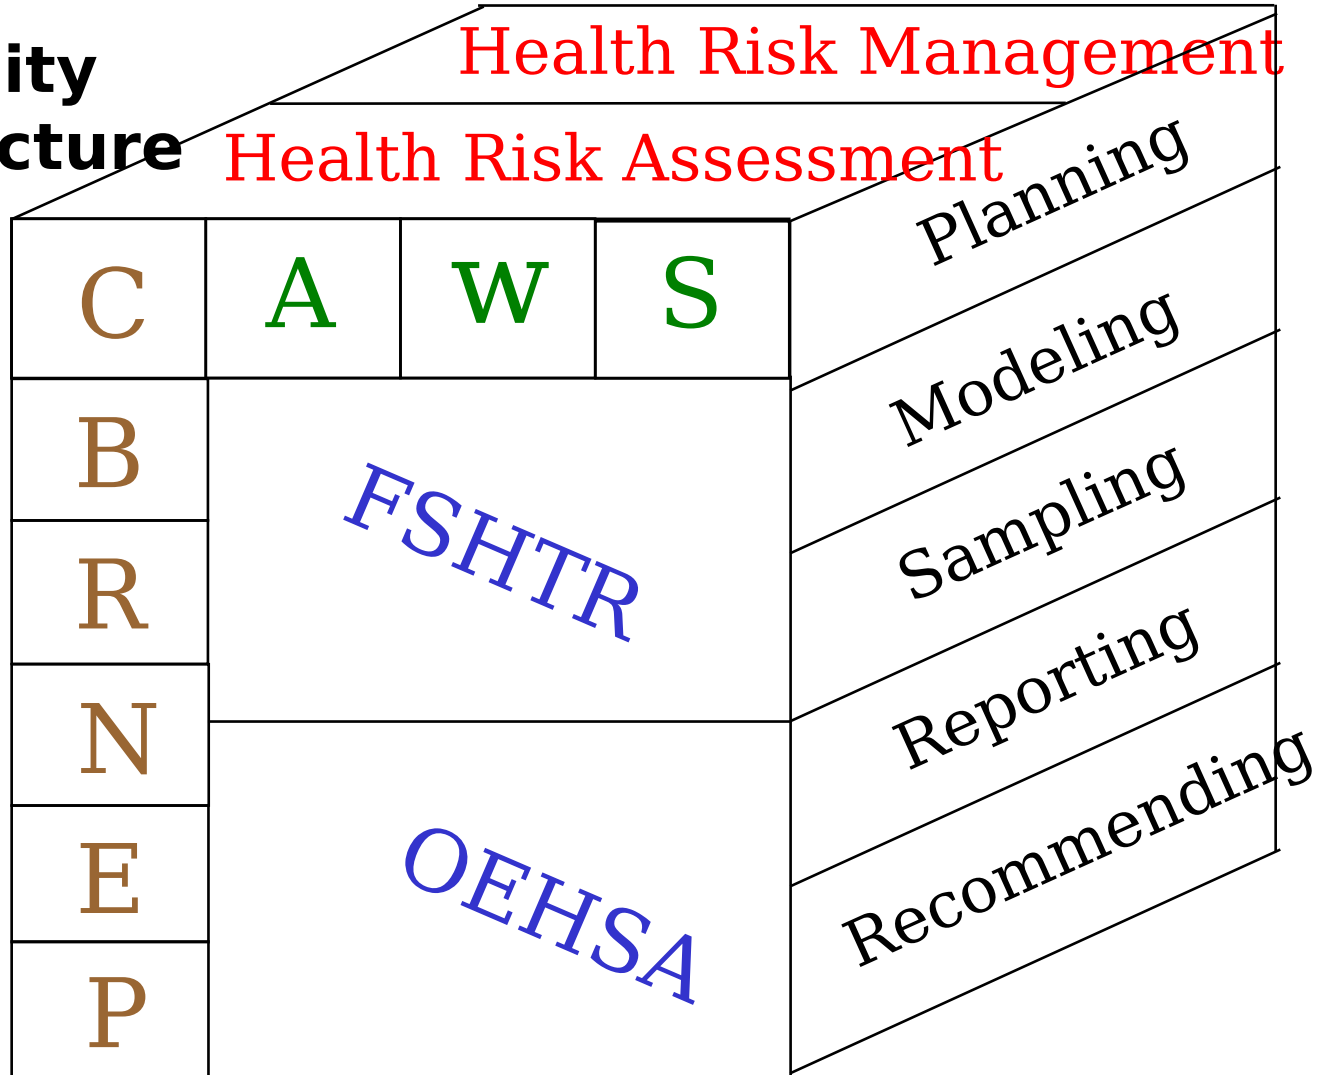

*Integrity - Service - Excellence*




U.S. AIR FORCE

# BE Capabilities

## VX Vapor Detection Baseline\* Analysis

### Roles

WOC CE BE

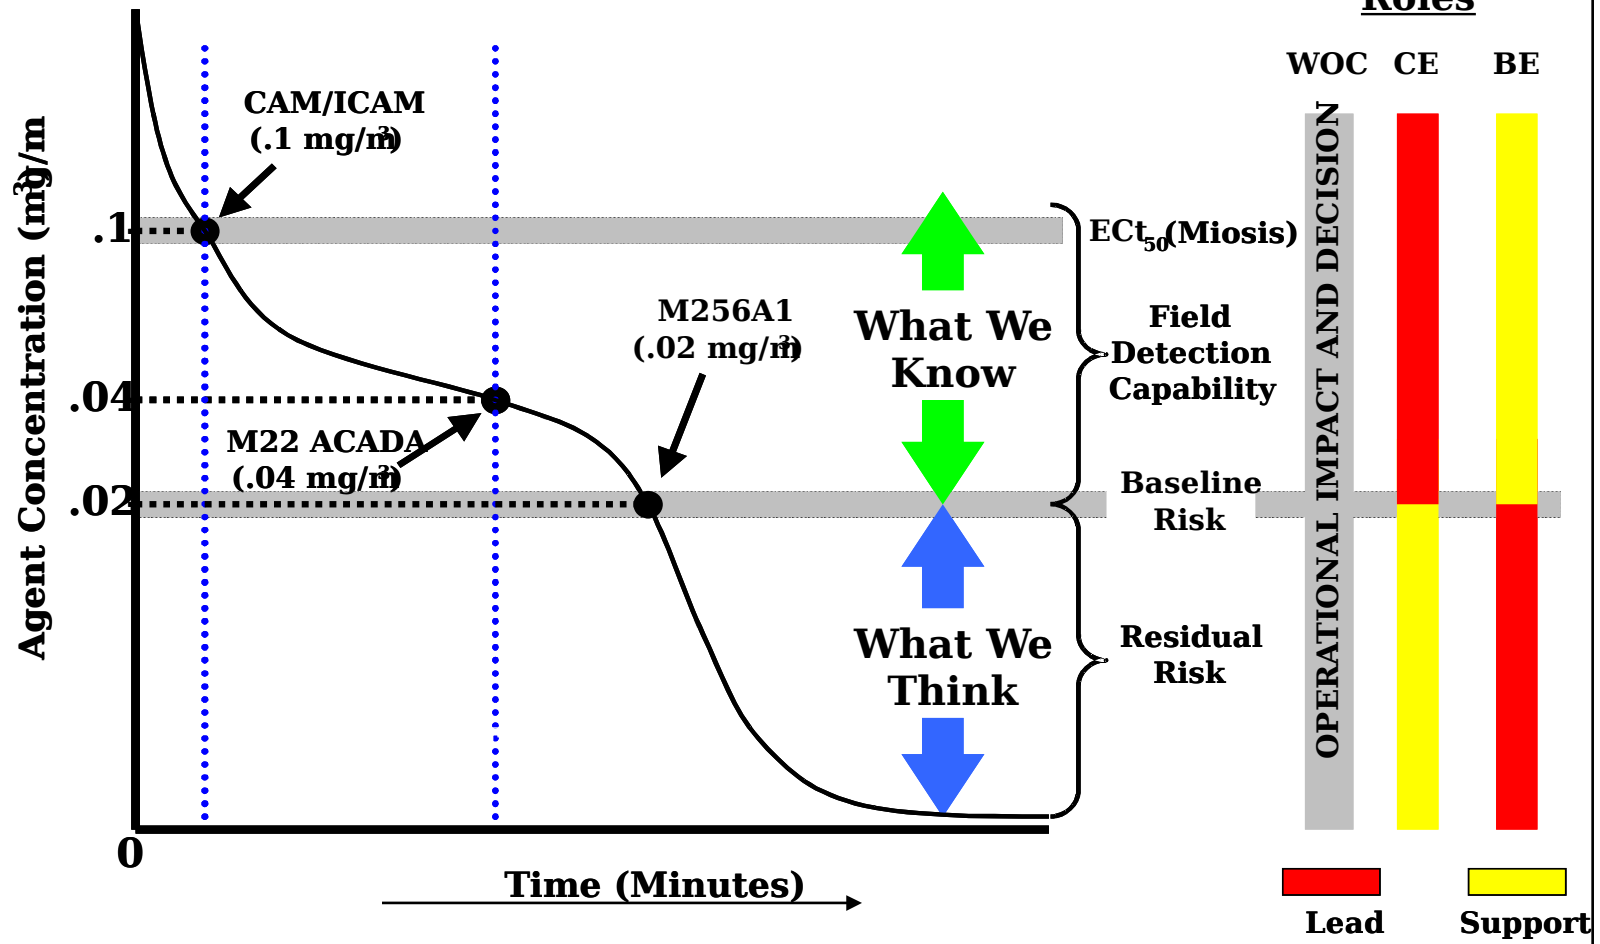

*Integrity - Service - Excellence*



**U.S. AIR FORCE**

---

# **Response Equipment**



U.S. AIR FORCE

# Response Equipment



## Previous Capability



**HHA  
ADM 300  
Ion Chamber  
Staplex  
HVAS  
LEL/O<sub>2</sub>/ CO/H<sub>2</sub>S  
PID/FID**



**Env Sample  
Collection  
Detector Tubes  
M256, M272, M8/9**



## More Capability

**HAZMAT ID  
Gamma  
Spectrometer  
XMV Bio-aerosol  
HAZCAT Kit  
Detector Tube  
Sets  
RADECO HVAS**



*Integrity - Service - Excellence*




U.S. AIR FORCE

# BE Capabilities

## VX Vapor Detection Baseline\* Analysis

### Roles

WOC CE BE

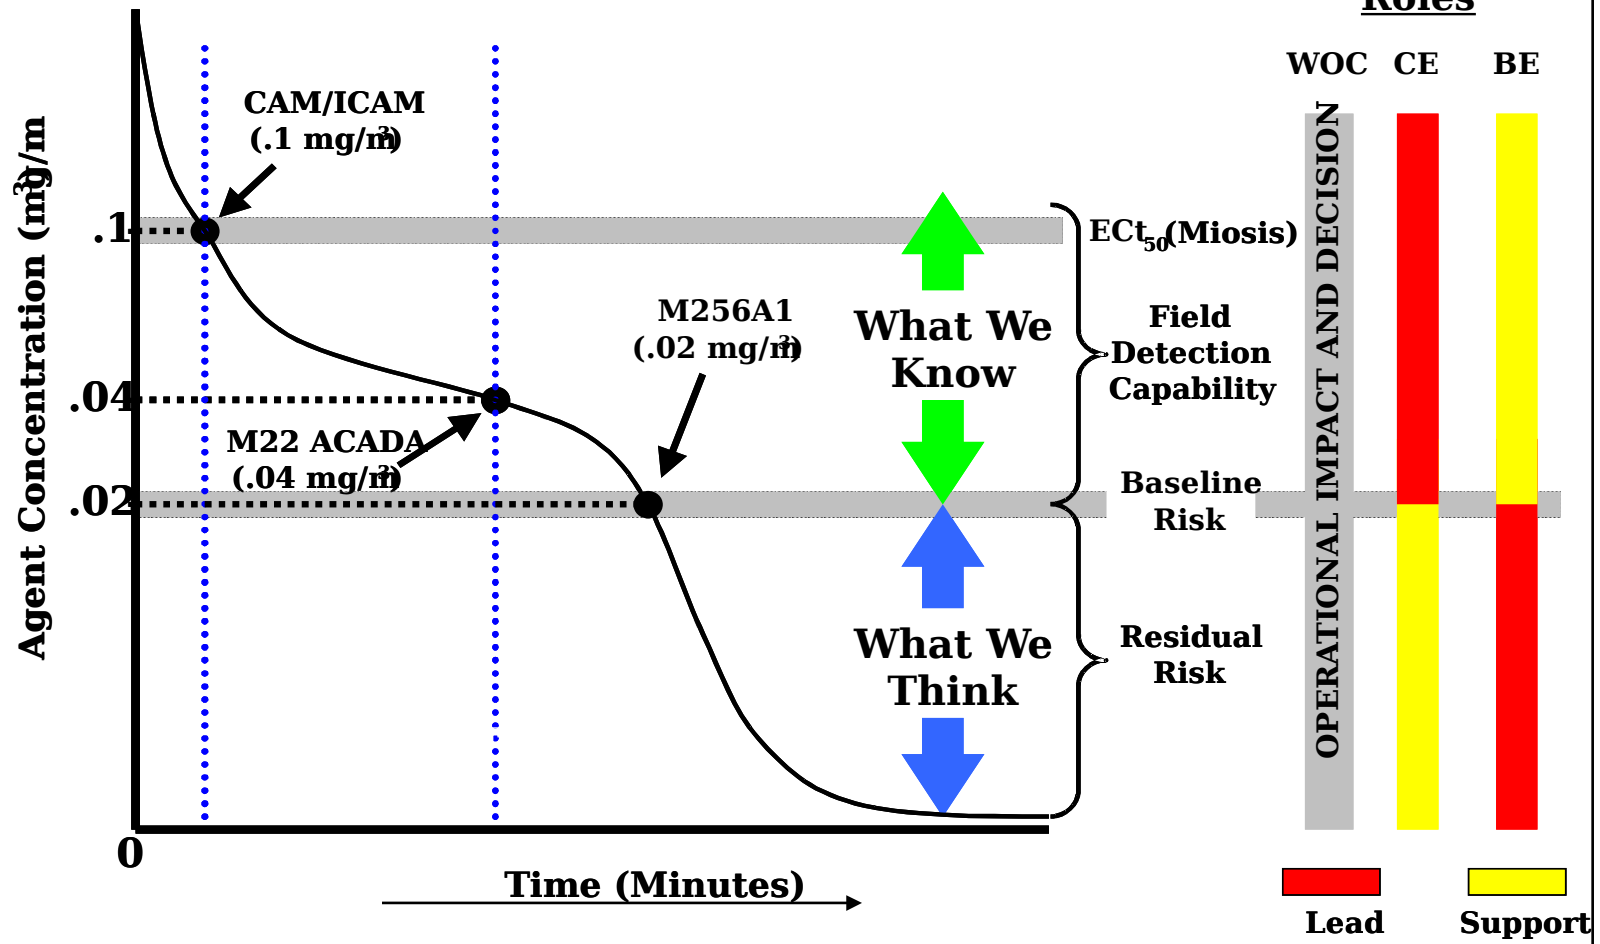

*Integrity - Service - Excellence*



U.S. AIR FORCE

# Response Equipment HAPSITE GC/MS

## ■ Capabilities

- Identification of volatile (easily evaporated) organic vapors
- Quantification (actual measured number for HRA)
- Detects at concentration levels never before achieved

## ■ Limitations

- Result times vary
- Doesn't measure all organics (molecular weight)
- Maintenance
- Advanced skills required





U.S. AIR FORCE


# Response Equipment HAZMAT ID System

## ■ Capabilities

- Identification of solid or liquid chemical compounds
- Provides real-time detection
- Excellent results in “white powder” responses

## ■ Limitations

- Identifies presence of biological material
- Qualitative only
- Sensitivities

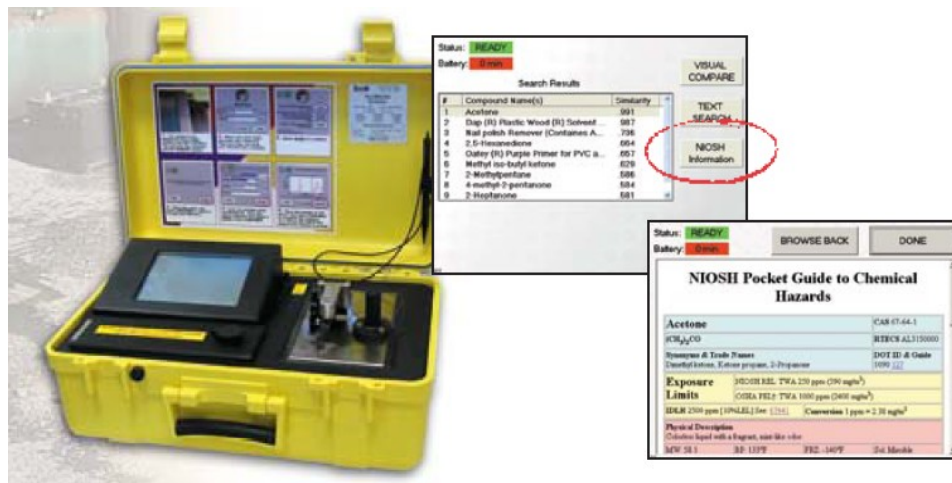





**U.S. AIR FORCE**

# **Response Equipment HAZMAT ID System**



***Integrity - Service - Excellence***



**U.S. AIR FORCE**

# **Response Equipment HAZMAT ID System**



***Integrity - Service - Excellence***



U.S. AIR FORCE

# Response Equipment Gamma Spectroscopy System

- **Capabilities**
  - Identifies multiple radionuclides
    - Industrial source?
    - Weapon source?
    - Medical source?
  - Calculates isotope-specific dose rate (treatment support)
- **Limitations**
  - Operating temp range





U.S. AIR FORCE

# Response Equipment Draeger Civil Defense Kit

- **Capabilities**
  - Quick! (“Yes/No” answer)
  - Agent-specific
    - Cyanogen chloride
    - Sulphur Mustard
    - Phosgene
    - Chlorine
    - Nerve Agents
- **Limitations**
  - Qualitative only







U.S. AIR FORCE

# Response Equipment High Volume Air Sampler

- **Capabilities**
  - Draws air through filter to collect particulate matter
  - Useful in Broken Arrow and some radiological dispersion device (RDD) scenarios (improved capability)
- **Limitations**
  - External power source required
    - Small generator
  - Tripod required
    - Measure at breathing zone





U.S. AIR FORCE

# Response Equipment Electronic Personal Dosimeters

- **Gamma/Beta Radiation Dosimeter**
  - **Replaces IM-143 yellow pocket dosimeters!**
- **Capabilities**
  - **For individual use**
    - **Responders into hot zone**
  - **Calculates Dose**
  - **Measures dose rate**
    - **Displays on Dosimeter**
- **Limitations**
  - **Operating temp range**





U.S. AIR FORCE

# Response Equipment

---

- **Key “take aways”**
  - **Equipment response varies**
    - **Physiological effect levels**
  - **Equipment response times**
    - **Immediate / 20 minutes / 1 hour+**
  - **Biological detection is “presumptive”**
    - **Presence/Absence (not identification yet)**
    - **Need laboratory confirmation for definitive result**



**U.S. AIR FORCE**

---

# **Guidance**





- **AFI 10-2501, Full Spectrum Threat Response (FSTR) Planning and Operations**
  - **FSTR OPlan 10-2**
- **AFI 41-106, Medical Readiness Planning and Training**
  - **Medical Contingency Response Plan (MCRP)**



# **Recommendations**

- **Know BE capabilities**
  - **Information provided by the BE responders**
  - **Specifics at your installation (differences exist)**
- **Know functional roles and responsibilities**
  - **Synergy and differences (risk types)**
  - **Communication between response elements**
- **Emphasize joint training**
  - **CEF, CED, CEX w/ BE and MDG**
- **Increase exercise timelines**
  - **Continue into consequence management phase**
    - **Assess long term health and environmental effects and impacts on mission**



**U.S. AIR FORCE**

---

# Questions?

**MICHAEL J. RUSDEN, Col, USAF, BSC**  
**Bioenvironmental Engineering Consultant**  
**Chief, Environmental and Occupational Health**  
**Division**

**AFMOA/SGPB**

**110 Luke Avenue, Rm 405**

**Bolling AFB, DC 20032-7050**

**~~DSN: 297-4314; Comm: (202) 767-4314; Fax:~~**

**5053**

***Integrity - Service - Excellence***



**U.S. AIR FORCE**

---

# **BACK UP SLIDES**



U.S. AIR FORCE

# Primary USAF Vapor Detection Capabilities (1 of 2)

DETECTOR	AGENT	THRESHOLD CRITERIA (mg/m <sup>3</sup> )	INSTRUMENT RESPONSE CRITERIA
CHEMICAL AGENT MONITOR (CAM)	VX	0.1	WITHIN 1 MINUTE
	HD		
	GB		
	GD		
	GF		
	L		
M22	VX	0.01	63 seconds
	HD	0.01	11 seconds
	GB	0.03	62 seconds
	GD	0.04	12 seconds
	GF	NO DATA	NO DATA
	L	0.01	12 seconds



U.S. AIR FORCE

# Primary USAF Vapor Detection Capabilities (2 of 3)

DETECTOR	AGENT	THRESHOLD CRITERIA (mg/m <sup>3</sup> )	INSTRUMENT RESPONSE CRITERIA
M256A1	VX	Not Evaluated	10 - 20 MINUTES
	HD	2 (+/- 1)	
	GB	0.03 (+/- 0.02)	
	GD	No Data	
	GF	No Data	
	L	9 (+/- 5)	
HAPSITE  (next few slides)	VX	0.01  to 0.0001	Generally > 15 minutes  (faster if not a complex sample)
	HD		
	GB		
	GD		
	GF		



U.S. AIR FORCE

# Exposure Example

<b>Instrument</b>	<b>VX Threshold Criteria (mg/m<sup>3</sup>) ("detection limit")</b>	<b>Time to Miosis (0.1 mg-min/m<sup>3</sup>) if at limit</b>	<b>Time to ICT 50 (10 mg-min/m<sup>3</sup>) if at limit</b>
<b>M256A1</b>	<b>2 (assumed = to HD)</b>	<b>0.05 min (3 sec)</b>	<b>5 minutes</b>
<b>CAM</b>	<b>0.1</b>	<b>1 minute</b>	<b>100 minutes</b>
<b>M-22</b>	<b>0.01</b>	<b>10 minutes</b>	<b>1000 min (16.7 hrs)</b>
<b>Hapsite</b>	<b>0.001</b>	<b>100 minutes</b>	<b>10,000 min (6.9 days)</b>